eafBlaster PRO

STAINLESS STEEL MICRO-MESH

Installation Guide

Recommended Tools	 Tin Snips/Dremel Gloves Safety Glasses *Optional: Circular (Ch 	 Extension Ladder Drill Tape Measure op) Saw
	ONLY NEEDED FOR INSTALL OPTION 2: Commercial or Wooden Brake 	

Safety Is Our #1 Priority.

During installation we recommend that you...

- Wear gloves and safety glasses.
 - Use an extension ladder and standoff for stability.
- Make all cuts and bends to the gutter quards on the ground.

ALSO MAKE SURE TO:

- Obey local building codes.
- Check to see if your roofing material is adhered to your underlayment. Do not pry up your shingles or tear your underlayment.
- Remove any labels/stickers from the gutter guard piece as needed.

FREEZING CONDITIONS

If you live in an area that is prone to freezing, the following issues can occur with any gutter guard:

Icicles & Ice Dams


Icicles and ice dams may form on your gutter during freezing conditions. Ice dams can cause water to leak back into your home. Icicles can break and cause serious bodily harm and injury. Properly installed, operated and maintained heating elements on your roof and gutter can melt icicles and ice dams. Use a local licensed electrical contractor in good standing for installing any heating element products.


Snow Melting


Snow melt may result in water runoff from your roof which can refreeze on the ground below creating a potential slipping hazard.

Important Reminders

Missing these steps can result in rainwater runoff.

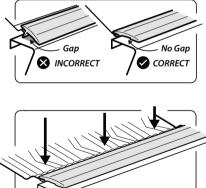

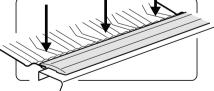

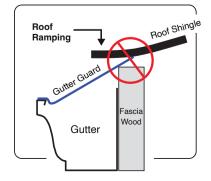

Remove The Gap

There should be no space between the front rail and the gutter lip when you install.


Create A Trough

Mesh trough should be at least 1/8" below gutter lip. Use fingers to push mesh trough down.

Avoid Roof Ramping


Shingles lifting upward will cause water to run over the gutter guard, instead of allowing water to flow onto and through the gutter guard.

Installation: Start Here

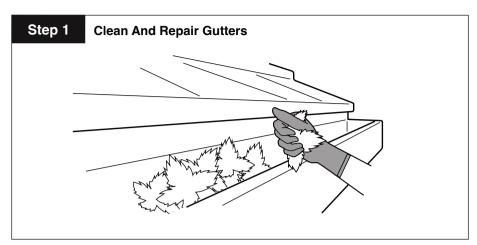

Step 2 Measure & Cut Gutter Guard As Needed

Use a pair of sharp tin snips to cut through the rail extrusion and stainless steel micro-mesh. When cutting the rail, it is important to use small cuts to break through the rail.

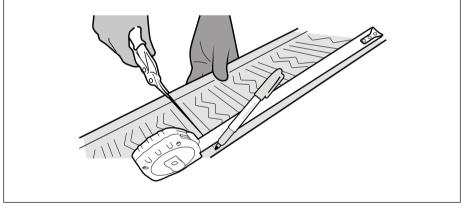

Step 3 Determine The Roof Slope

The optimum slope for gutter guard install is 5-25°.


Optional install methods can be used when installing under the shingle is not an option. If the roof is steeply pitched or if you have a low hanging gutter, it is recommended to drop the slope of the gutter guard to between 5 and 10 degrees.






Steeply Pitched Roofs

If your roof looks like this, continue to **OPTION 2.**

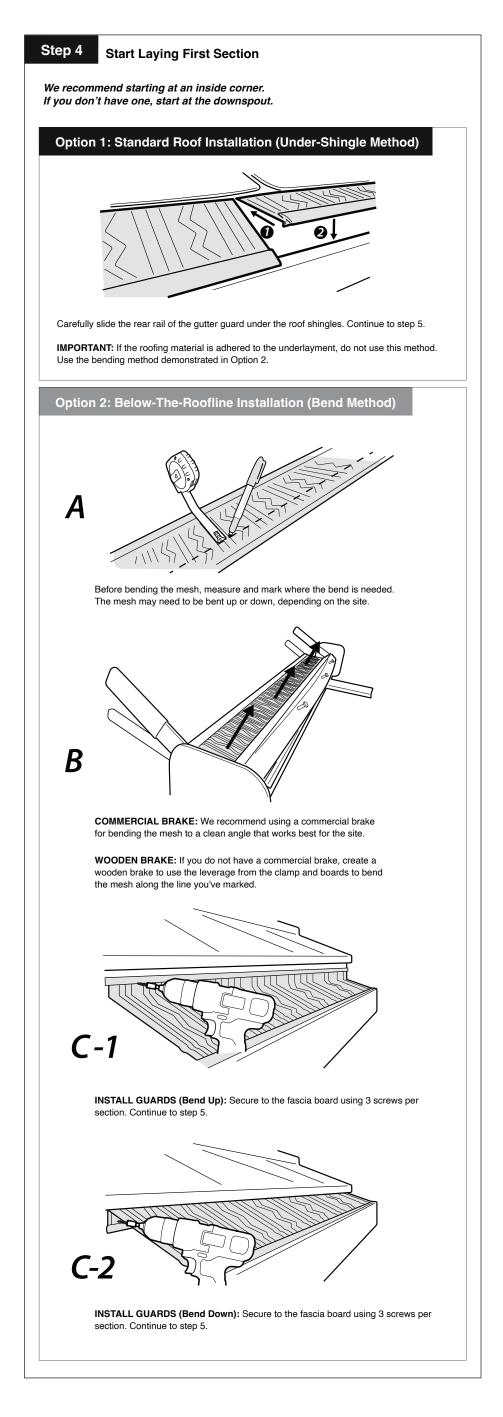


Step 5 Use Screws To Attach Image: Constraint of the screw of the sc


How-To: Inside Miters

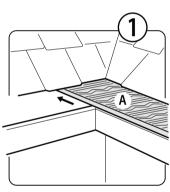

Slide piece A all the way into the inside corner of the gutter.

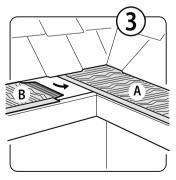

Tuck the exposed mesh of piece B down inside the gutter adjacent to the adjoining gutter guard.

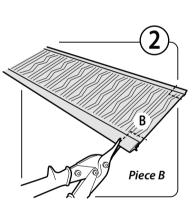


For piece B, trim back the aluminum rail about 1", leaving some mesh exposed.





This is a completed inside corner. For heavy rain flow areas, you may need to use 14-mesh and/or add rain diverters.

How-To: Outside Miters

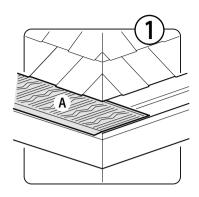


Place piece A along the outside corner.

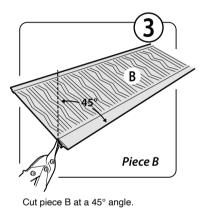


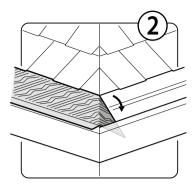


Bend down the aluminum rail and mesh to create a 45° angle.

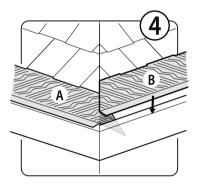


Once cut, fit it into the outside edge so that it's aligned with piece A.

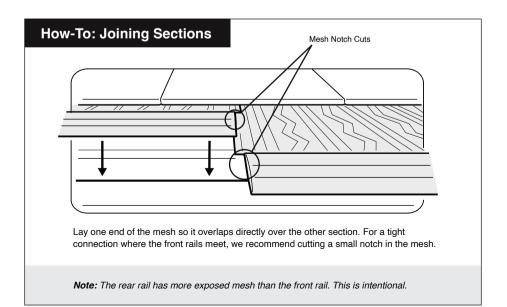


How-To: End Caps

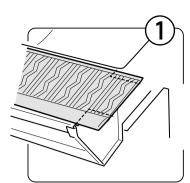

At the end of a stretch of gutter, mark on each aluminum rail where it meets the end of the gutter.

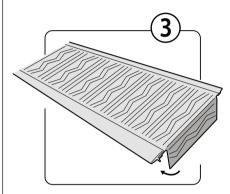

Bend and tuck the exposed mesh into the gutter. You can trim the mesh as needed to create a good covering.

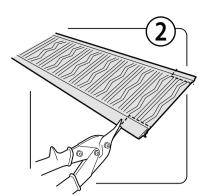

From the ground, trim back the aluminum rails where they are marked to expose the remaining mesh.



Make sure the entire gutter end is sealed to prevent debris and pests from getting under the gutter guards.

Need More Help?

CLICK HERE

for Installation Videos and More Information at LeafBlasterPro.com/Installation



or Contact Our Support Team: customerservice@gutterglove.com 886.483.8166 Monday-Friday 8am-7pm CST

